

Unik Funkis
Windows & Doors

VINDUES
INDUSTRIEN



Installer and User Manual
FOR DVV-LABELLED
WINDOWS AND EXTERNAL DOORS
IN TIMBER/ALUMINIUM

Unik Funkis
Windows & Doors

VINDUES
INDUSTRIEN

Installer and User Manual
FOR DVV-LABELLED WINDOWS
AND EXTERNAL DOORS
IN TIMBER

Joint diagram for wood and aluminum windows.
Blocking up, always under or close to bearing mullions and side frames.

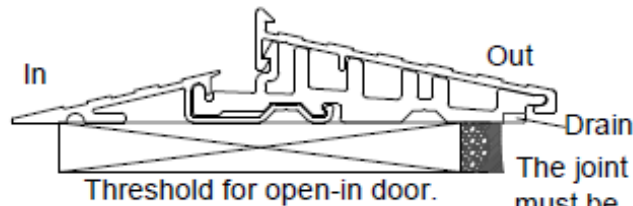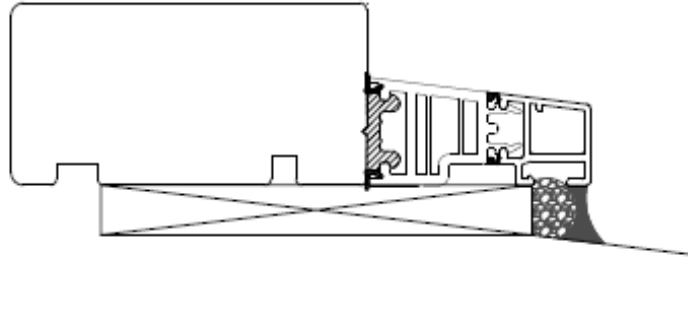

GUIDELINES!

As a rule, technical aids for lifting windows and doors must be used.

When handling at forearm distance.

Under 15 kg	!	!	✓
15-35 kg	⚡	!	✓
Over 35 kg	⚡	⚡	✓

For additional details on handling windows and doors on construction sites see the "Installer and User Manual"

Installation of unmounted glass

To make the element resistant to break-in, the glass must be glued to the inside of the groove in at least 4 places no more than 1000mm (40 inches) apart.

Joint diagram for wood and aluminum windows.
It is recommended that fastening to the building be done through the frame rebate using a frame screws with large head.
Doors should always be fixed through or immediately below the hinges. Supporting blocks must be used behind all fixing points

